



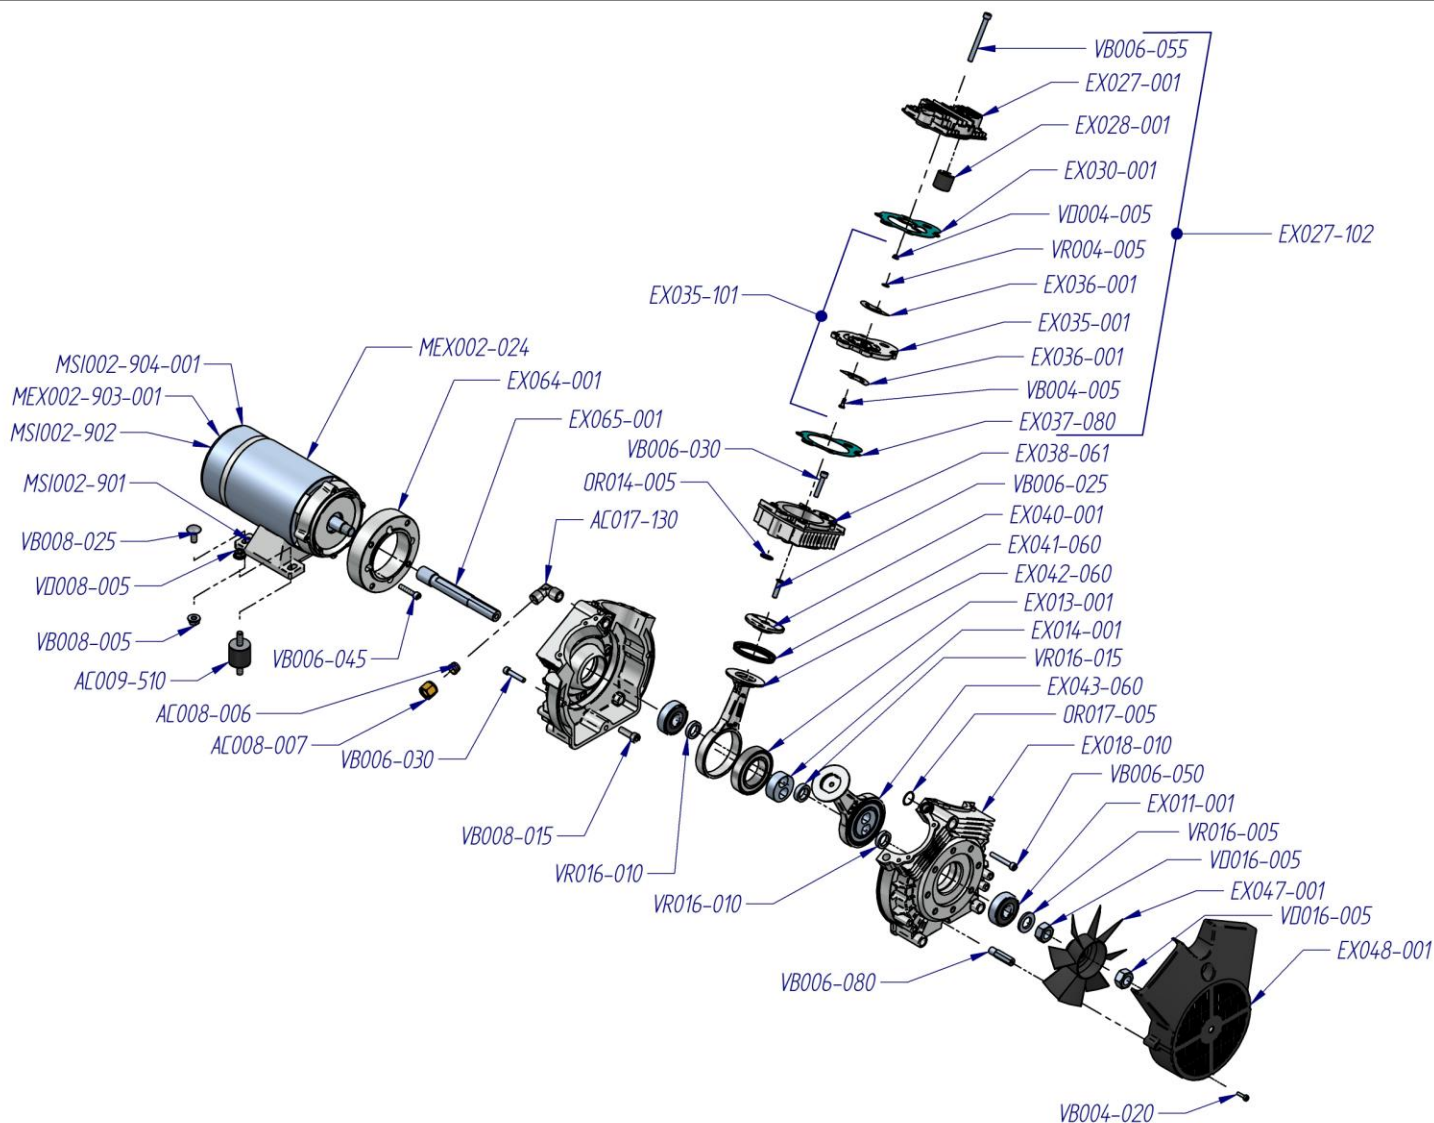

CODE	DESCRIPTION	CODE	DESCRIPTION	CODE	DESCRIPTION
AC008-006	Ogive for aluminum tube 12mm	EX040-001	Piston top	VB006-045	Screw
AC008-007	Nut for tube 12 mm aluminum	EX041-060	Piston seal	VB006-050	Screw
AC009-510	No-vibration rubber	EX042-060	Connecting rod	VB006-055	Screw
AC017-130	Pipe felling "L"	EX043-060	Complete connecting rod	VB006-080	Screw
EX011-001	Bearing for compressor monobloc	EX047-001	Plastic fan	VB008-005	Screw
EX013-001	Bearing for connecting rod	EX048-001	Plastic cover fan	VB008-015	Screw
EX014-001	Handspike socket	EX064-001	Flange EXTREME BATTERY	VB008-025	Screw
EX018-010	Compressor Monobloc	EX065-001	Shaft EXTREME BATTERY	VD004-005	Nut
EX027-001	Head	MEX002-024	Electric motor 24 Volt 800 Watt 2600 rpm	VD008-005	Nut
EX027-102	Complete Head	MSI002-901	Support motor	VD016-005	Nut
EX028-001	Filter	MSI002-902	Cover motor brush	VR004-005	Washer
EX030-001	Gasket head	MEX002-903-002	Brush holders motor	VR016-005	Washer
EX035-001	Valve plate	MSI002-904-001	Brush	VR016-010	Washer
EX035-101	Valve plate complete	OR014-005	O-ring	VR016-015	Washer
EX036-001	Valve	OR017-005	O-ring		
EX037-080	Gasket cylinder 0,8	VB004-005	Screw		
EX037-050	Gasket cylinder 0,5	VB004-020	Screw		
EX037-030	Gasket cylinder 0,3	VB006-025	Screw		
EX038-061	Cylinder	VB006-030	Screw		

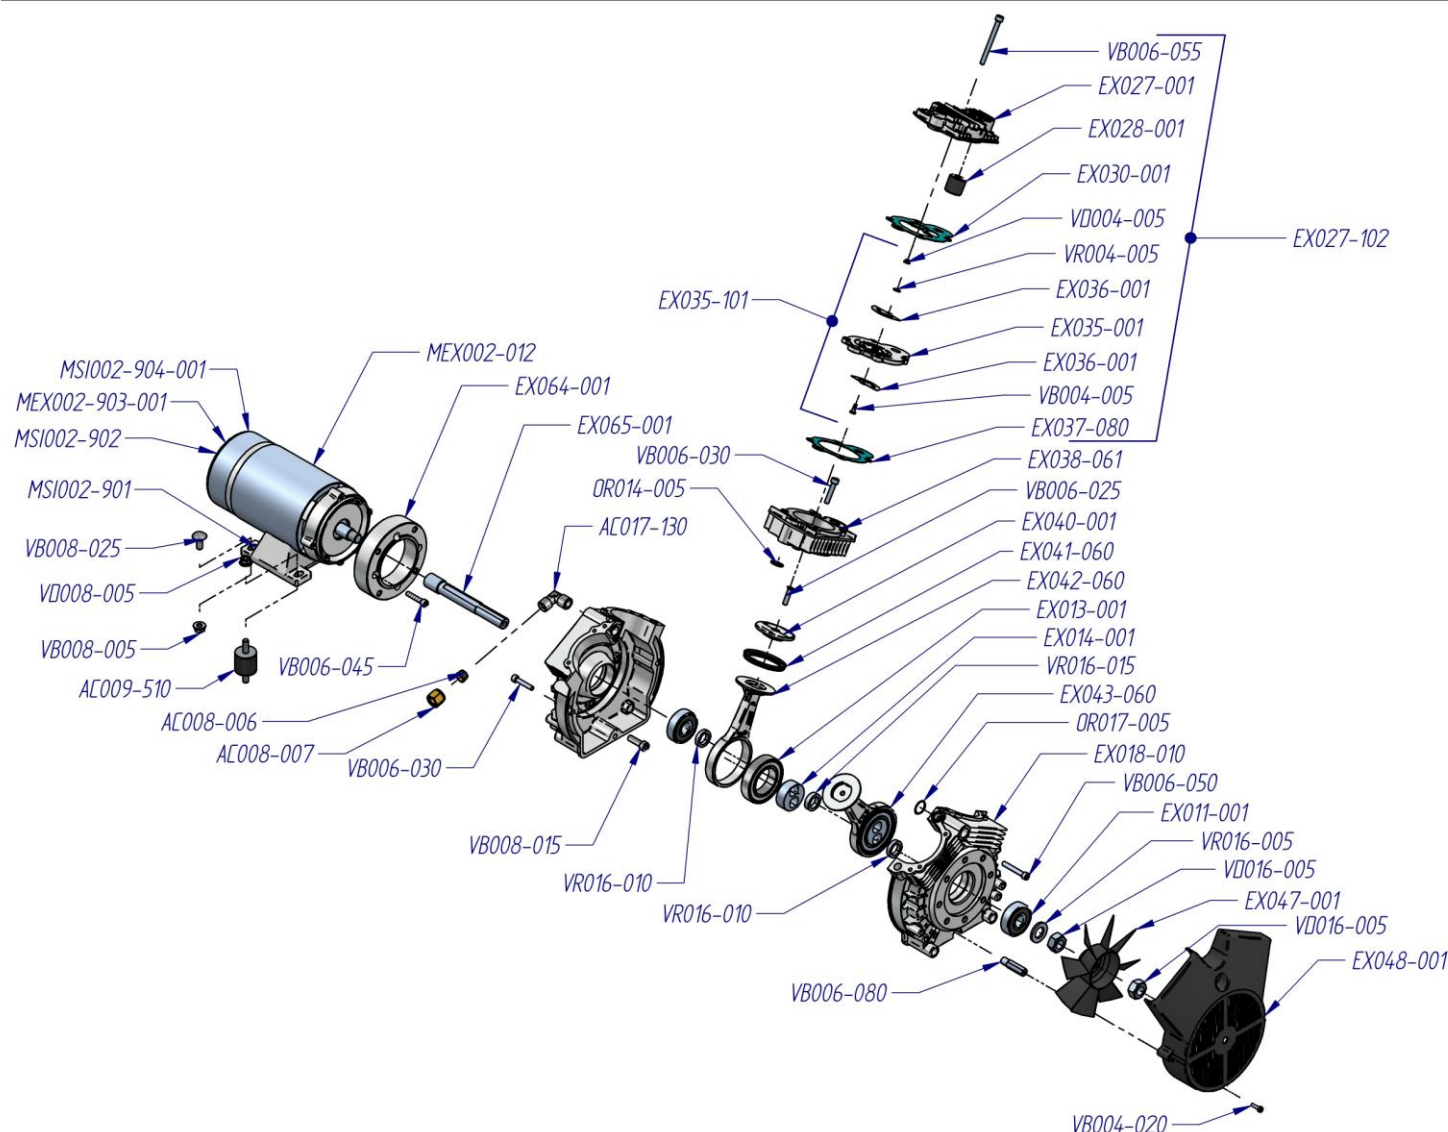

CODE	DESCRIPTION	CODE	DESCRIPTION	CODE	DESCRIPTION
AC008-006	Ogive for aluminum tube 12mm	EX040-001	Piston top	VB006-045	Screw
AC008-007	Nut for tube 12 mm aluminum	EX041-060	Piston seal	VB006-050	Screw
AC009-510	No-vibration rubber	EX042-060	Connecting rod	VB006-055	Screw
AC017-130	Pipe felling "L"	EX043-060	Complete connecting rod	VB006-080	Screw
EX011-001	Bearing for compressor monobloc	EX047-001	Plastic fan	VB008-005	Screw
EX013-001	Bearing for connecting rod	EX048-001	Plastic cover fan	VB008-015	Screw
EX014-001	Handspike socket	EX064-001	Flange EXTREME BATTERY	VB008-025	Screw
EX018-010	Compressor Monobloc	EX065-001	Shaft EXTREME BATTERY	VD004-005	Nut
EX027-001	Head	MEX002-012	Electric motor 12 Volt 800 Watt 2600 rpm	VD008-005	Nut
EX027-102	Complete Head	MSI002-901	Support motor	VD016-005	Nut
EX028-001	Filter	MSI002-902	Cover motor brush	VR004-005	Washer
EX030-001	Gasket head	MEX002-903-002	Brush holders motor	VR016-005	Washer
EX035-001	Valve plate	MSI002-904-001	Brush	VR016-010	Washer
EX035-101	Valve plate complete	OR014-005	O-ring	VR016-015	Washer
EX036-001	Valve	OR017-005	O-ring		
EX037-080	Gasket cylinder 0,8	VB004-005	Screw		
EX037-050	Gasket cylinder 0,5	VB004-020	Screw		
EX037-030	Gasket cylinder 0,3	VB006-025	Screw		
EX038-061	Cylinder	VB006-030	Screw		